


## FLAG WITH SNOW DEPTH GAUGE


### Flag on anchor loop with integrated flag mount

Place the flag into the flag mount and adjust the snow depth gauge to the desired position.

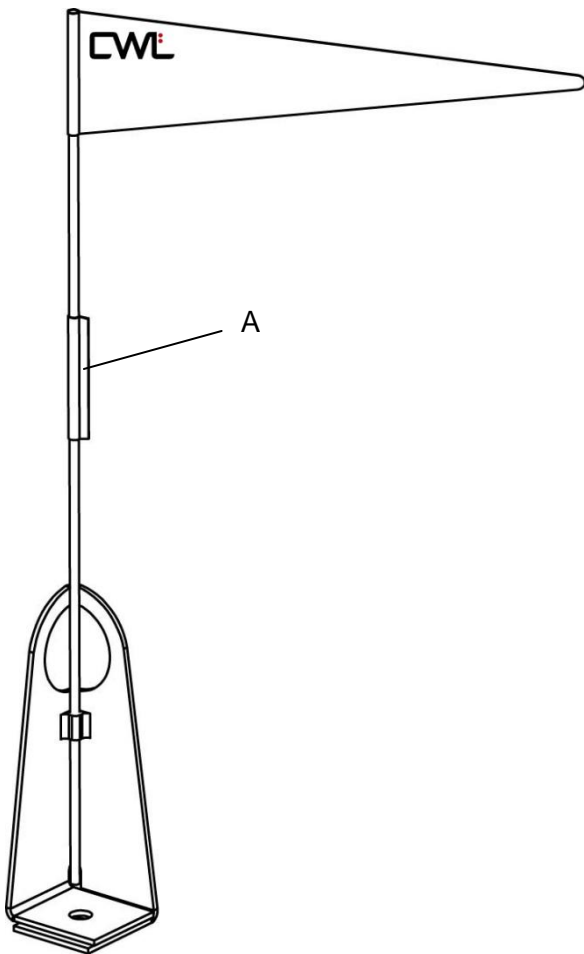

### Flag on bracket without flag mount

Install the flag in a suitable location and move the snow depth gauge to the desired position.

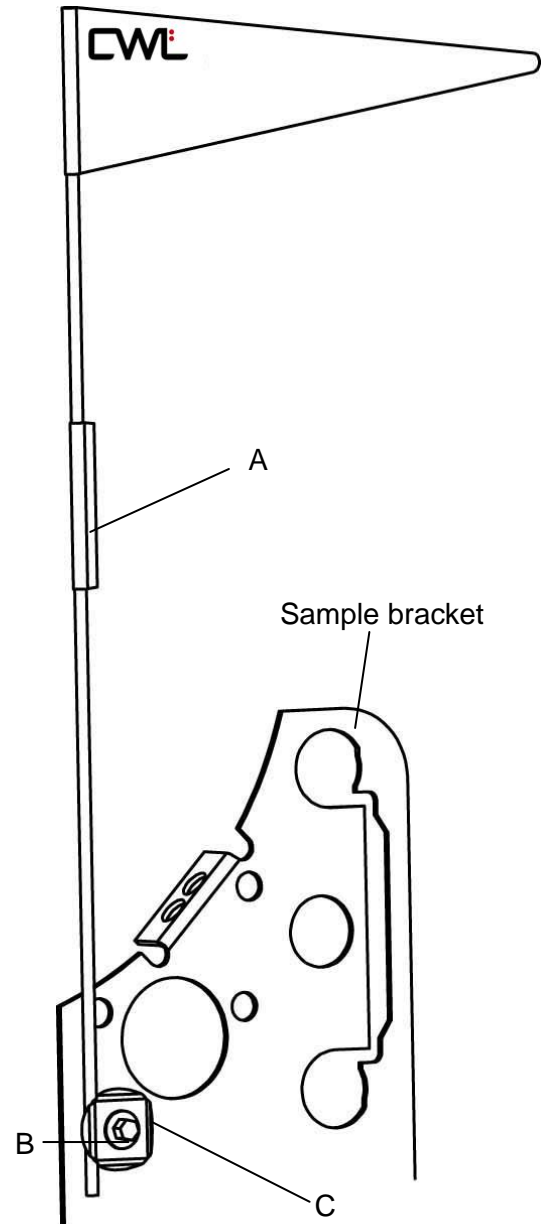

A= Snow depth gauge B= Locking plate C= Self-tapping stainless steel screw with a sealing washer